

Soccer Goal & Shot Panel



Assemble Instruction Manual

CAUTION:


1. CHECK ALL CONTENTS ARE INCLUDED BEFORE ASSEMBLY.
2. ALWAYS ASSEMBLE AND DISASSEMBLE THE PRODUCT UNDER ADULT SUPERVISION.
3. ANY BREAKAGE FOUND ON THE PRODUCT, PLEASE STOP ASSEMBLING OR DISASSEMBLING IT.
4. CHECK THE EQUIPMENT BEFORE EACH TIME USE IT.

CONTENTS:

1. "L" SHAPE FRAME POLE (2PCS)
2. "L" SHAPE FRAME POLE (2PCS)
3. FRAME POLE (2PCS)
4. FRAME POLE (1PC)
5. FRAME POLE (1PC)
6. FRAME POLE (2PCS)
7. "L" SHAPE FRAME POLE (1PC)
8. "L" SHAPE FRAME POLE (1PC)
9. "J" SHAPE FRAME POLE (2PCS)
10. FRAME POLE (2PCS)
11. FRAME POLE (2PCS)
12. "L" SHAPE FRAME POLE (2PCS)
13. "L" STYLE GROUND PEG (5PCS)
14. "U" STYLE GROUND PEG (8PCS)
15. SCREW (8PCS)
16. TARGET HOOK (18PCS)
17. TARGET PANEL (1PC)
18. NET (1PC)
19. STRING (1PC)
20. TOOL (1PC)
21. TOOL (1PC)

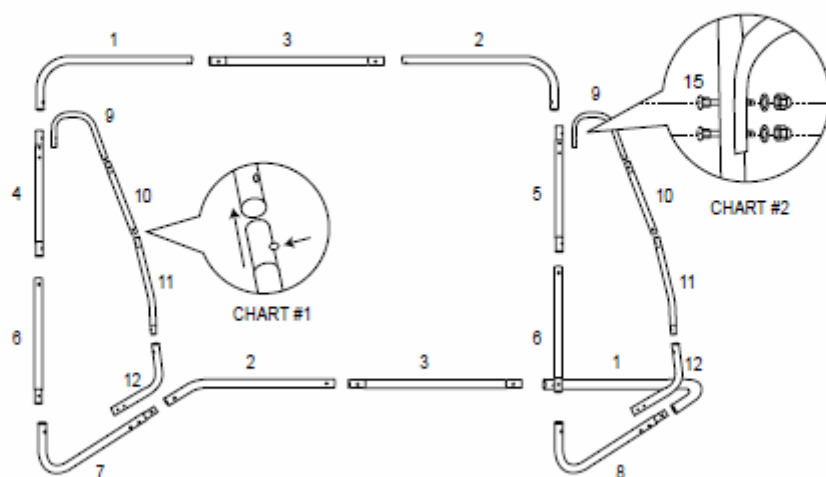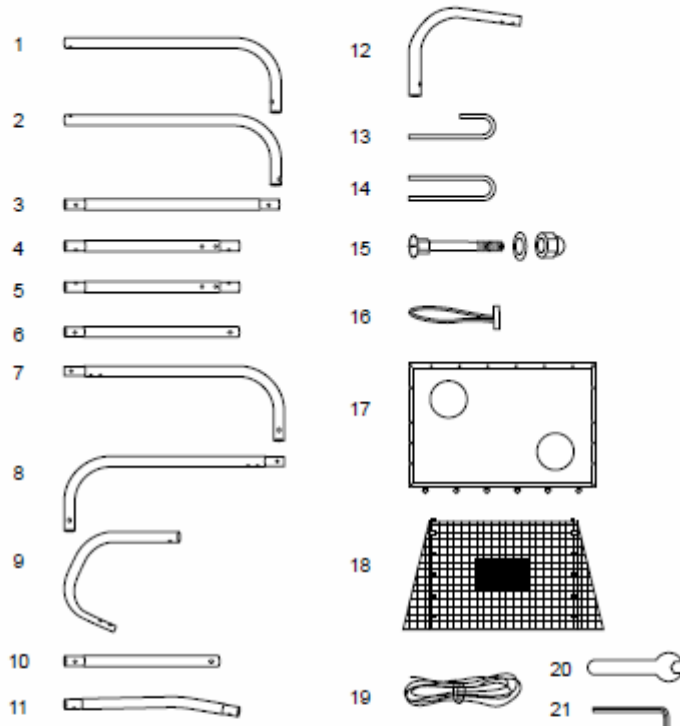

1. ASSEMBLE ALL POLES AS CHART #1 SHOWN.
2. SPREAD THE NET OUT AS CHART #2 SHOWN.

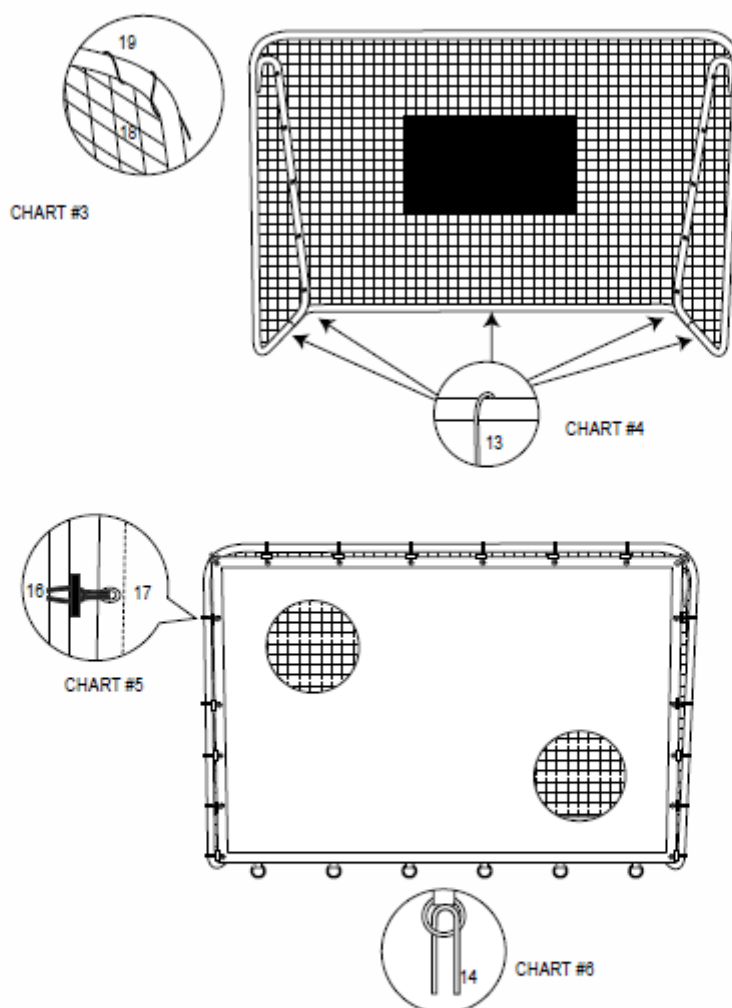

3. LOCATED THE RED TABS ON LEFT TOP AND RIGHT TOP POLE. BIND THE NET AND WHOLE FRAME BY THREADING STRING #19 IN AND OUT INTO NET OR BY VELCRO AND FRAME AS CHART #3 SHOWN. THE SEAM OF THE NET HAS TO BE FOLLOWED THE SUPPORTING POLE.
4. TO SECURE THE GOAL BY USING "L" STYLE GROUND PEG AS CHART #4 SHOWN.
5. SPREAD THE TARGET PANEL OUT, FIX THE PANEL ON GOAL USING TARGET HOOK AS CHART #5 SHOWN.
6. TIGHTEN THE PANEL TO GROUND USING "U" STYLE GROUND PEGS AS CHART #6 SHOWN.

-
1. DO NOT CLIMB THE PRODUCT.
 2. DO NOT HANG ON THE PRODUCT.
 3. DO NOT PLACE THE PRODUCT NEAR THE FLAME AREA.