


DC ELECTRIC AIR PUMP
READ FOLLOWING INSTRUCTIONS AND
WARNINGS BEFORE USE.

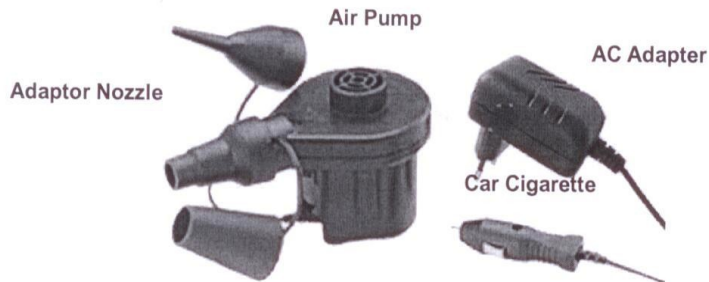

IMPORTANT

1. This unit must be used with AC Adapter type GQ30-120200-BG powered by AC100-240V or by Car Cigarette of 12V-DC volt.
2. This is low volt and low-pressure pump. It is intended to inflate items such as inflatable boats, air mattresses, etc.
3. This pump is not designed for continuous use or for filling tires. Extended operation can overheat and damage the pump. Do not use the pump consistently for over 15 minutes, take 15 minutes break before you use it again.
4. Keep this air pump away from the reach of children.
5. The sound pressure level under normal operating conditions is 80dB(A).
6. Do not attempt to use attachments not recommended by our company specially any adapters not provided by our company trying to fit this unit may cause damage.

WARNING

1. Carefully follow instructions on articles to be inflated. Never exceed recommended pressures. Bursting items can cause serious injury.
2. Never leave pump unattended while in use.
3. Do not use under wet conditions.
4. Never allow sand, small rocks, etc, to be sucked into inflation or deflation port while operating.
5. Never look into or point the inflate opening toward your eyes while pump is operating.
6. Do not attempt to put hand or fingers into the inflation port at all time.
7. AC adapter is protected by thermal fuse. The thermal fuse will cut off power when the temperature exceeds the limit.
8. CAUTION-To reduce the risk of electric shock, do not expose to rain. Store indoors.

9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.
11. The supply cord of adapter cannot be replaced. If the cord is damaged the appliance should be scrapped.

TO INFLATE ITEMS

1. **For Ac adapter:** Connect the AC adapter with 230 volt AC. Plug the AC adapter's output to the DC pump.
2. **For Car cigarette:** Insert the car cigarette into cigarette lighter plug receptacle in 12V DC.
3. Hold pump against inflation valve on item to be inflated and turn the switch firmly "on" by pushing forward and "off" by pushing backward.

NOTE: On large items like inflatable boats and large air mattresses, the pump will fit directly into the inflation valves and provide faster inflation times. Use the appropriate adapter on small inflation valves as on small air mattresses, etc.

TO DEFLATE ITEMS

1. Open the inflation valve on item to be deflated.
2. Attach adaptor if necessary to pump (deflate Opening) and push into inflation valve.
3. Turn pump "on" by pushing forward the switch firmly and "off" by pushing backward.

NOTE: On small inflation valves, the valve may have to be "pinched" you're your fingers to open the flapper inside the valve and allow the air to escape.

WEEE

1. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
2. Contact your local government for information regarding the collection systems available.
3. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
4. When replacing old appliances with new one, the retailer is legally obligated to take back your old appliance for disposal at least for free of charge.