
# Children Seesaw

SPSW-0170 01/21

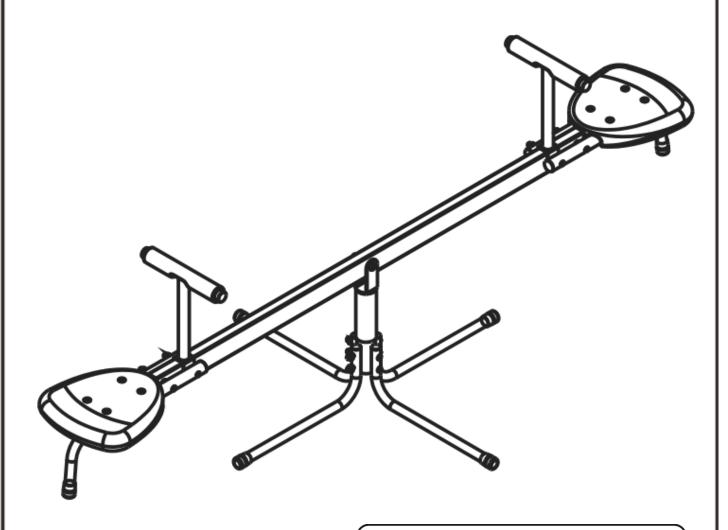


READ THIS FIRST!!!

IN CASE OF MISSING OR BROKEN PARTS,
PLEASE CONTACT PLACE OF PURCHASE FOR ASSISTANCE.

Manual depicts typical installation your model may differ from illustrations


## Accessories

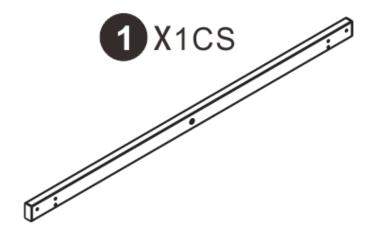










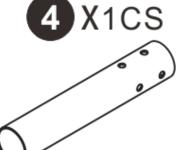

5 X4PCS

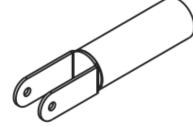


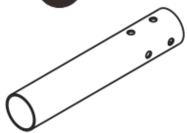

 






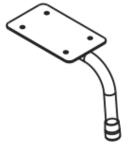



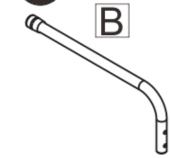






















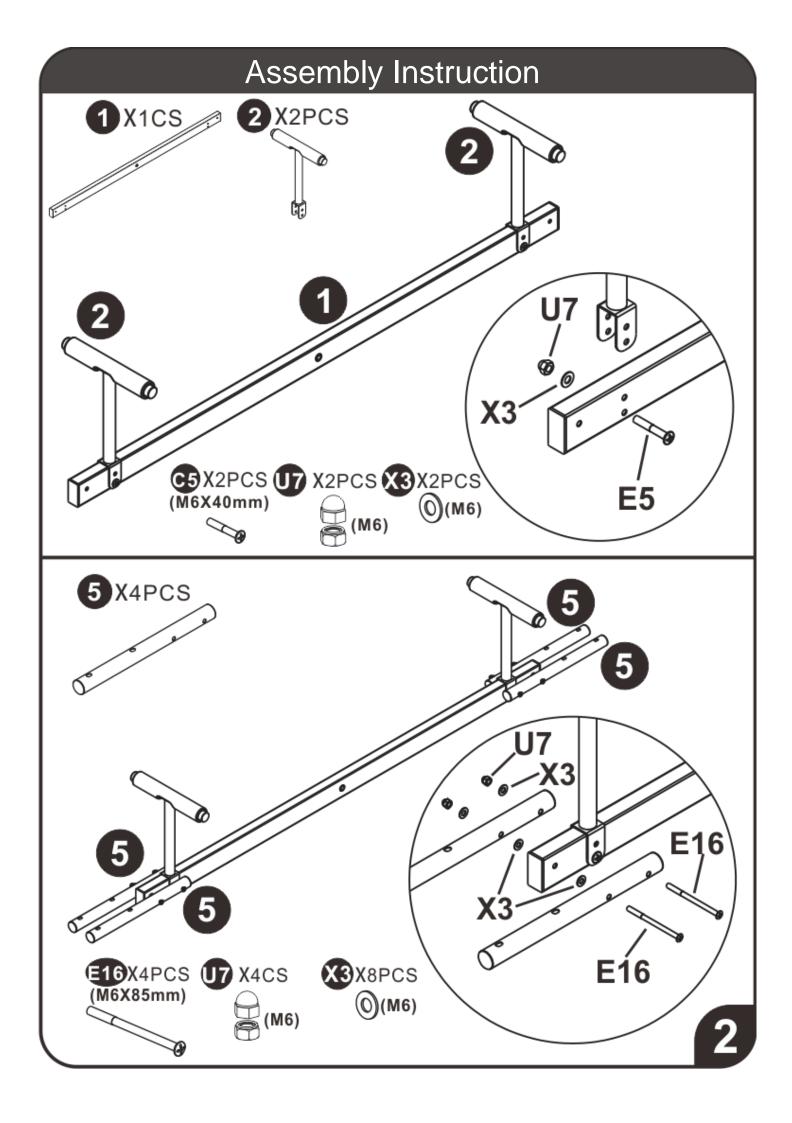

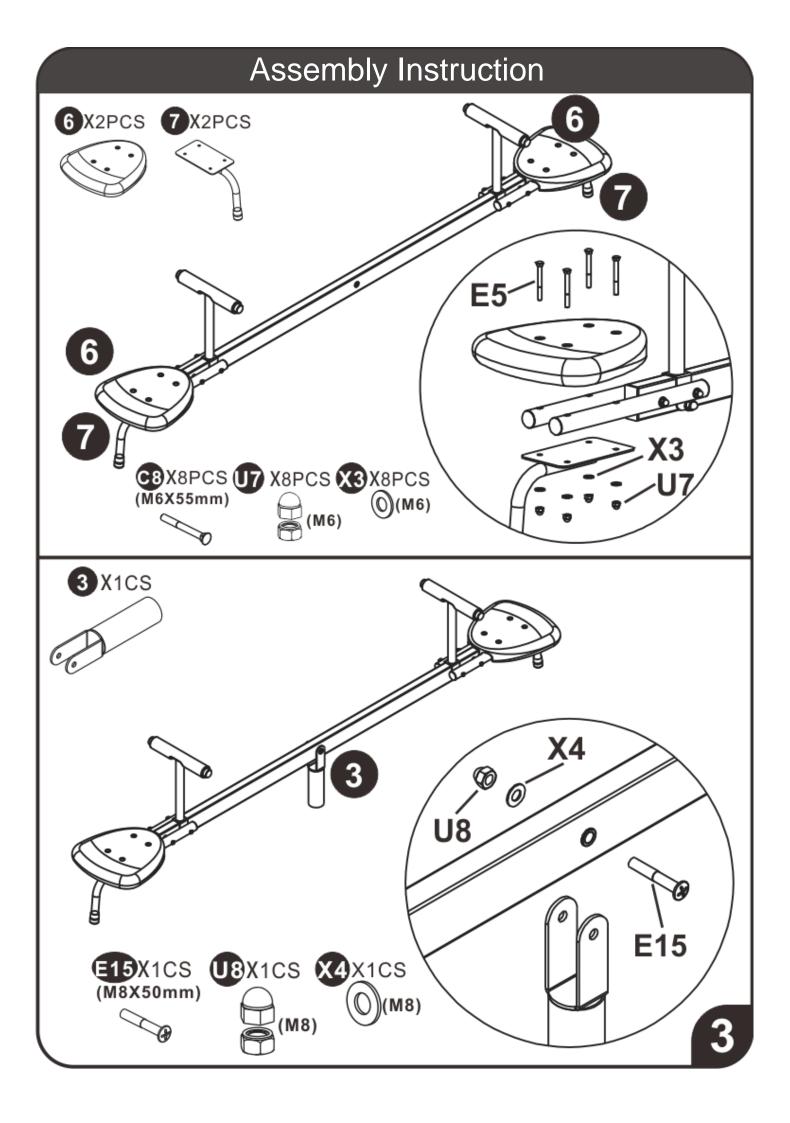

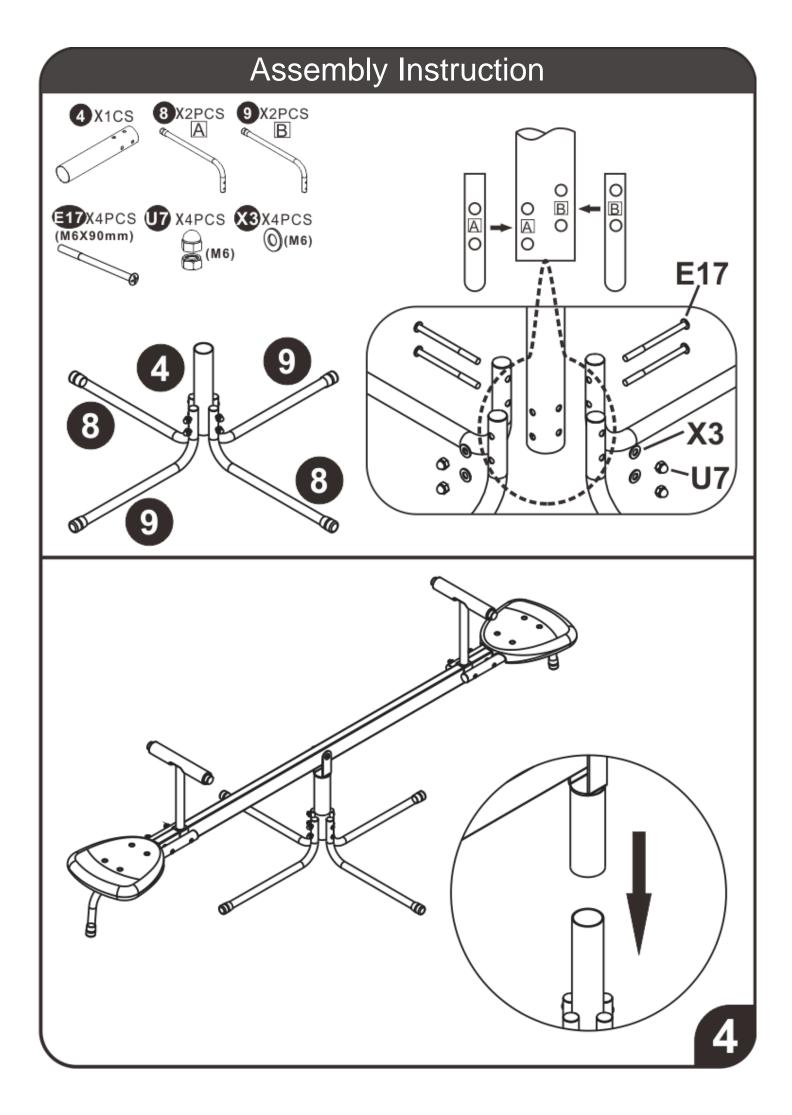

## ATTENTION AND CAUTION

#### **WARNING:**

- THIS SEE-SAW MUST BE ASSEMBLED BY AN ADULT AND MAKE SURE ALL THE NUTS AND BOLTS ARE SCREWED TIGHTLY BEFORE USE.
- 2. THIS SEE-SAW CAN BE USED INDOOR OR OUTDOOR.
- 3. THIS SEE-SAW CAN BE USED ON SOFT GROUND.EG GRASS.
- 4. THIS UNIT MUST BE USED UNDER THE SUPERVISION OF ADULT.
- 5. AGE RECOMMENDATION: 3-8 YEARS. MAXIMUM WEIGHT FOR EACH SEAT 25KG.
- THIS SEE-SAW IS NOT SUITABLE FOR CHILDREN UNDER THE AGE OF 3 YEARS
   OLD DUE TO SMALL PART-CHOKING HAZARD.
- 7. FOR FAMILY DOMESTIC USE ONLY.
- 8. PLEASE KEEP THE ASSEMBLY INSTRUCTION AND ALL INFORMATION FOR FUTURE REFERENCE.

#### WARNING & RECOMMENDATIONS

THIS PRODUCT MUST BE ASSEMBLED BY AN ADULT OR UNDER SUPERVISION OF
AN ADULT.
WE RECOMMEND THAT THE SEE-SAW IS USED ON SOFT GROUND, I.e. GRASS.
DO NOT LEAVE YOUNG CHILDREN UNATTENDED WHILST PLAYING ON THIS
SEE-SAW.
PLEASE FASTEN THE BOLTS AND THE NUTS BEFORE TO USE THE SEE-SAW

### **MAINTENANCE**

Warning: assemble according to the manufacturer" s instructions. Check regularly for wear and tear. Ensure fixings and anchorage is secure at all times. Check metal sections or components for signs of corrosion. Discontinue use if weakening or breakage is found. Failure to comply with these precautions may result in injury.