
Hanging Hammock Manual

The hanging hammock chair is ideal for children to rest or play.

The mild swings stimulate the children's sense of balance.

Recommended age: 3 years +

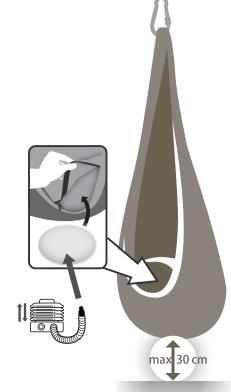


















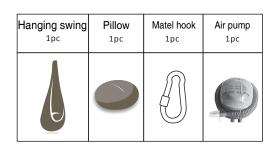

REQUIRED SPACE

The installation of the Hanging Crow's Nest swing requires a suspension height of 200 cm. If the suspension is from a higher point, the Hanging crow's Nest can be extended with a rope.

FIXATION

In order to hang a Hanging Crow's nest swing, a suspension point is necessary from either a ceiling, a tree limb or a beam. The Hanging crow's Nest requires a minimum amount of space and even fits into smaller children's rooms. It can be removed in one simple step when no longer needed.

MACHINE-WASHABLE

Swing can be machine-washed: delicate cycle 30°C!

DO NOT TUMBLE DRY!

In order to preserve your product, line dry. Do not machine dry.

PROTECT FROM ABRASION

Ensure that your hammock swings freely and does not rub on the ground.

REMOVE AT NIGHT

Cotton hammocks are susceptible when exposed to constant moisture. Therefore, take the hammock down in the evening to protect it from overnight dampness. Keep in mind that a hammock that has become damp needs adequate air circulation to dry.

KEEP DRY DURING WINTER

We recommend cleaning and thoroughly drying the hammock before the winter season. After it is completely dried, store the hammock in plastic to protect from vermin.

The suspension device for hanging your hanging crow's nest must be installed by a professional and needs to be checked for wear and tear regularly. Wear and tear elements that show signs of wear need to be replaced immediately

Never leave children unattended in your hanging crow's nest. It is imperative that the attachment to a suspension device is carried out by an adult