



1371 snow bob


INSTRUCTION



Tapping Screw:

a		M 4.2×16mm
b		M 4.2×10mm

First of all
specification

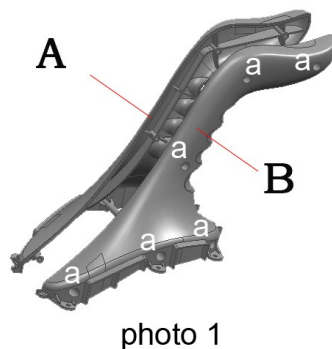


,we need to use two
screws(a & b).
Specification“a”is
M4.2×16mm,
specification“b”is
M4.2×10mm.

es gibt 2 verschiedene Schrauben:

- a 4.2 x 16mm
- b 4.2 x 10mm

1. Using six specification “a”
screws to fasten A and B. see photo 1



verwenden Sie 6 Schrauben “a” um die Teile A + B zu fixieren (siehe
Photo 1)

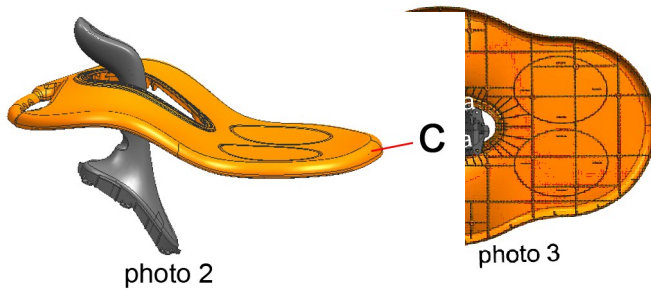

2. Putting handle into orange body (C), and then using eight specification “a” screws to fasten the handle to orange body (C) .

see photo 2 and photo 3

geben Sie den Griff in den orangenen Plastikteil und verwenden Sie 8 “A” Schrauben zur Befestigung (siehe Photo 2 + 3)

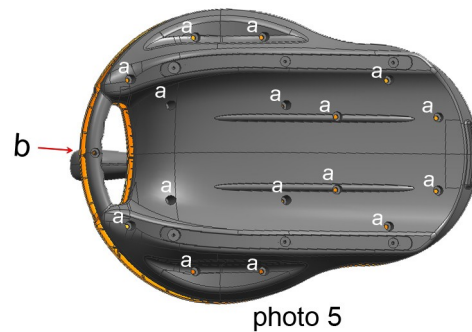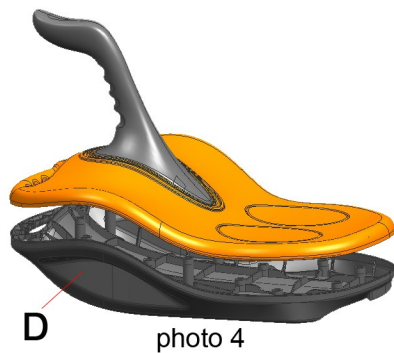

3. Using sixteen specification “a” screws and a specification “b” screws to fasten C and D .Please see the photo 4 and photo 5

Verwenden Sie 16 “a” Schrauben und 1 “b” Schraube um C + D zu befestigen

Remark : Please ensure to use screws specification exactly .