



USER'S MANUAL FOR:

# THE 3 UNIT OUTDOOR PLAY GYM SPSE-2400-ABC-1

SWING

GONDOLA

RIGID-SWING

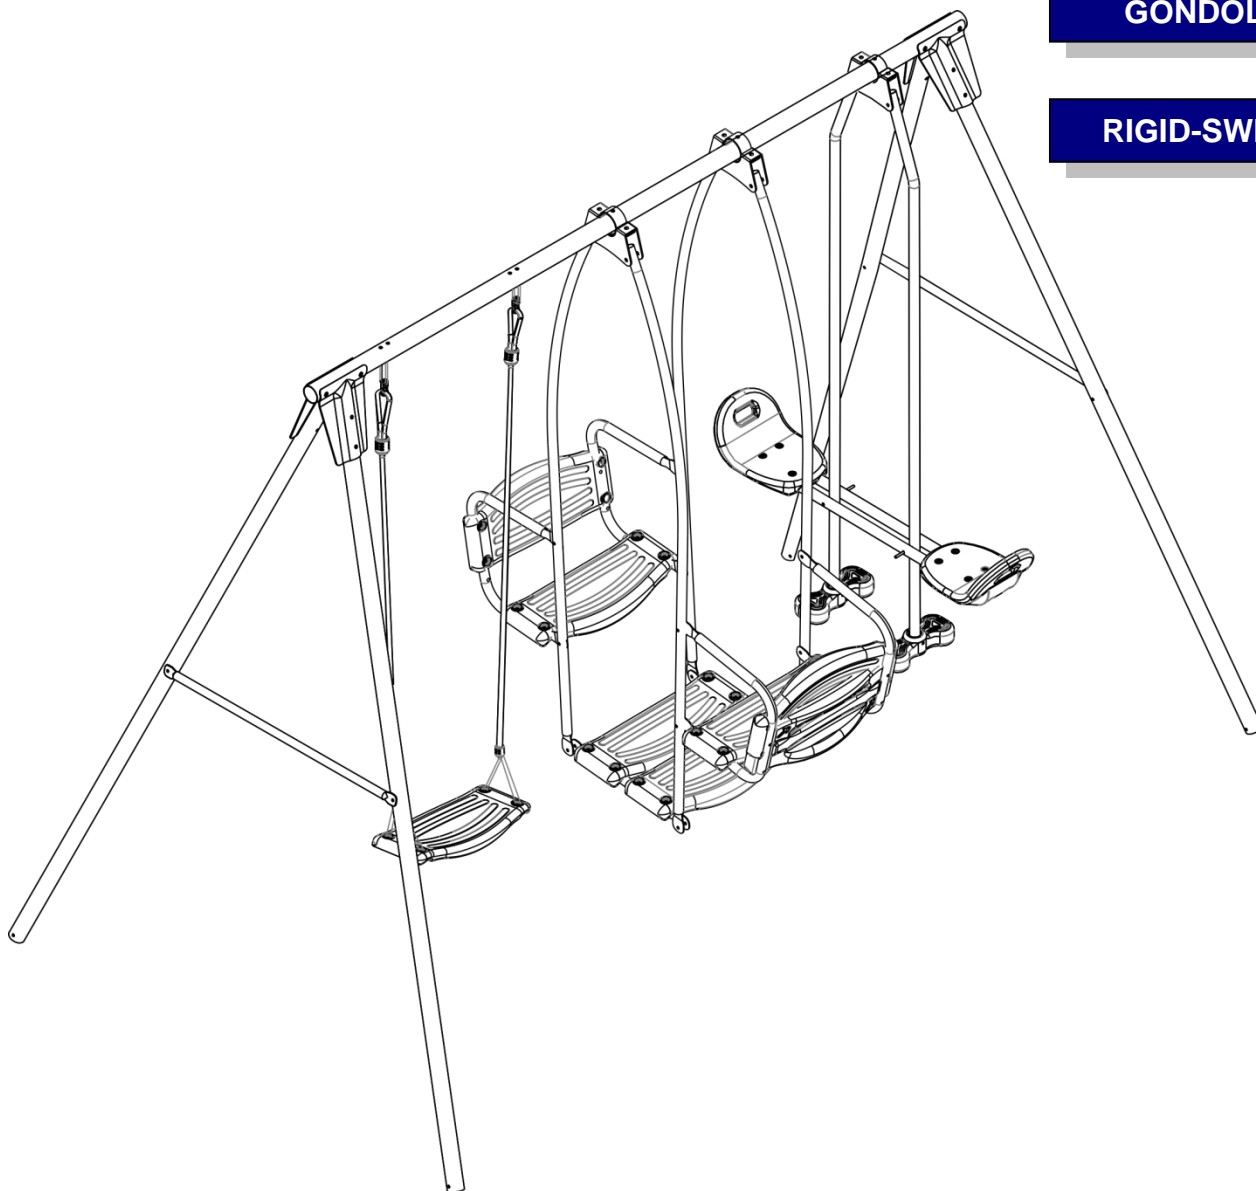

01/10

**READ THIS FIRST!!!**

**Thank you for purchasing our product**

**IN CASE OF MISSING OR BROKEN PARTS, PLEASE CONTACT PLACE OF PURCHASE FOR ASSISTANCE.**

**Caution:**

**This unit is designed for a maximum of 5 children between the age of 3 to 10 years old on the motion rides. Maximum weight for each seat - 110lb.**

**Warning!**

**Please read this instruction manual before you start with the assembly or use this swing set. You must follow all safety instructions while using this equipment; be absolutely sure that the surface on which this swing set is set up on, is properly surfaced with fine sand, and wood chips. Do not use this swing set on hard pack soil, concrete or any kind of hard surface. Read all cautionary statement before using this equipment.**

# ATTENTION AND CAUTION

1. This play GYM must be assembled by an adult and make sure all the nuts and bolts were screwed tightly.
2. This play GYM can be used indoor or outdoor, but if used indoor please make sure there is sufficient space for it (3M from each leg).
3. This play GYM can be used on general ground, lawn or concrete floor, our recommendation is lawn. (Pay attention to the method of fixing it on different surface).
4. This unit must be used under the supervision of adult.
5. Not suitable for children under 3 years due to small parts.
6. For family domestic use only.

## SAFETY INSTRUCTIONS

Please follow these instructions carefully and keep them for future reference.

- 1) The equipment must be assembled by an adult.
- 2) Adult supervision is required at all times when using this product.
- 3) Age recommendation: 3 To 10 years of age.
- 4) Maximum weight for each seat is 110lb.
- 5) Recheck screws and nuts if properly tighten.
- 6) Make sure the bolts are protected by rubber caps.
- 7) Use the equipment only in an open area, Free from obstructions that could harm a child.
- 8) Use the equipment on a flat grassy surface. Patios, concrete or other hard surfaces must be avoided.
- 9) Children must be shown how to use this product safely. Do not let children climb all over the equipment or do roll over on the end frame. This practice can cause serious injury.
- 10) The seat surface of the swing shall not be higher than 600mm from the ground. The swing is use for sitting only and not for standing.
- 11) Suspension systems, Anchor points and fixings must be checked regularly for wear and tear and replaced where necessary.
- 12) Ropes must be replaced every 12 months if necessary.
- 13) Paintwork should be checked regularly and if necessary can be touched up using a non-toxic enamel or "CAR" type paint.
- 14) It is indispensable that the legs are concreted into the ground. If this is not possible, then the ground anchor provided must be used instead.
- 15) Do not leave young children unattended while playing on the equipment.

# ASSEMBLY INSTRUCTION FOR THE 3 UNIT OUTDOOR PLAYGYM


Model. SPSE—2400—ABC—1

## PACKAGE CONTENTS / DIAGRAMS FOR PARTS:


### 1. CARTON PACK

PART NO	NAME	Q'TY
1	Top Support Bar	1
2	GYM Set Leg	4
3	Side Girt (With Safety Cap)	2
4	Strengthen the Slice (A)	2
5	Strengthen the Slice (B)	2
6	Half Circle Connector	6
7	Hanger Support Channel	3
8	Ground Anchor	4
9	Plastic insert	2
10	Spanner	1

PART NO	NAME	Q'TY
J3	M8X70 Bolt	7
J2	M8X60 Bolt	8
J1	M8X25 Bolt	6
K5	M6X55 Bolt	4
U1	M6 Safety Nut	4
U2	M8 Safety Nut	21
X1	M6 Iron Washer	4
X2	M8 Iron Washer	21
11	M6 Allen key	1
12	M8 Allen key	1

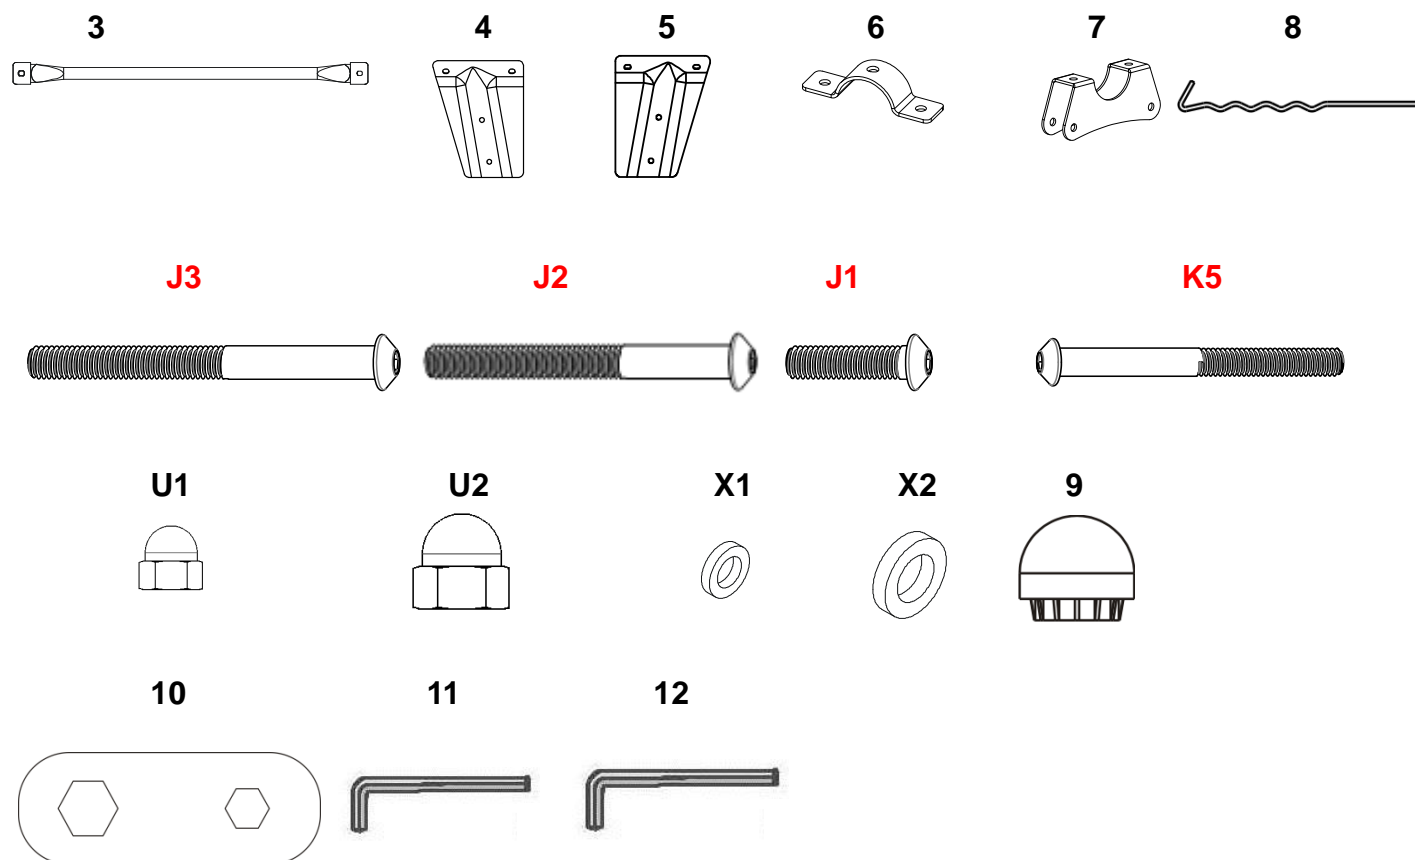

# ASSEMBLY INSTRUCTION FOR THE 3 UNIT OUTDOOR PLAYGYM

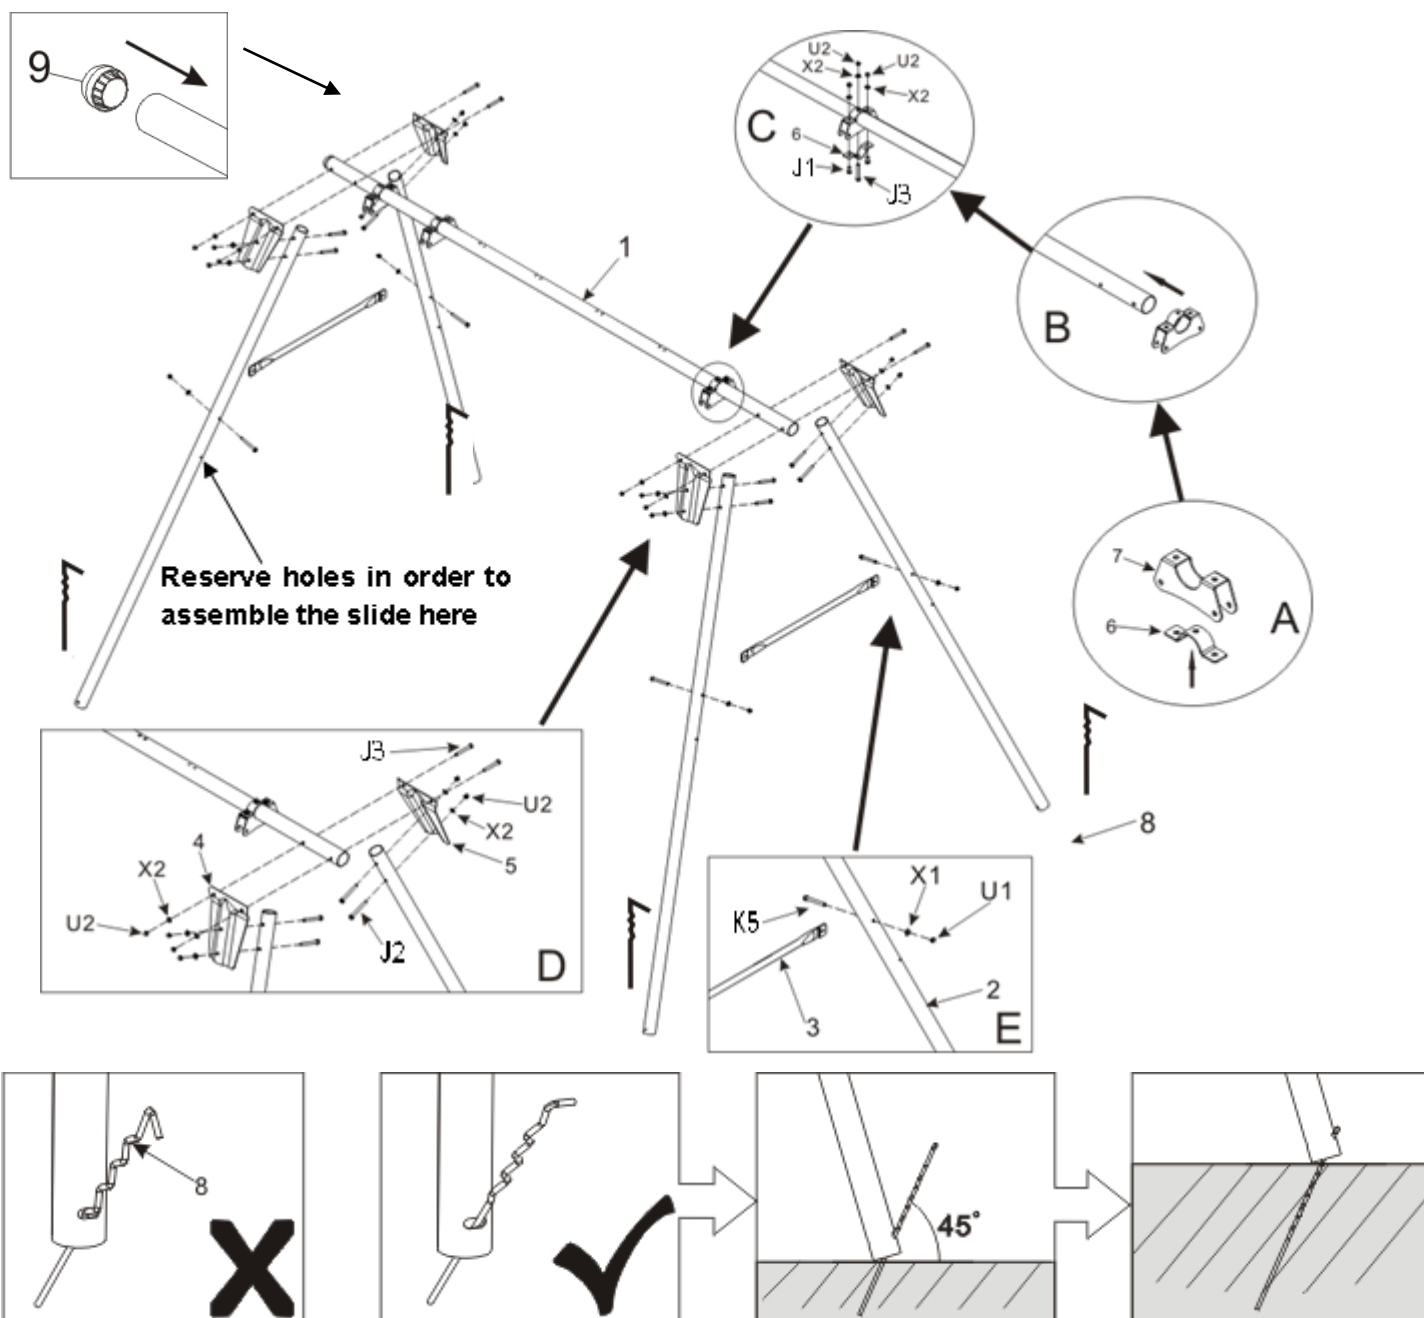

- A. Put half circle connector(6) into hanger support channel(7) through the channel.
- B. Thread the assembled component in step A through top support bar(1).
- C. Place the assembled component in place and fasten another half circle connector(6) to it using (J1), (J3), M8 Iron Washer(X2) and M8 Safety Nut(U2).
- D. Connect Strengthen the Slice (A) (4), Strengthen the Slice (B) (5) and top support bar with (J3), M8 Iron Washer(X2), M8 Safety Nut(U2) and plug gym set leg (2) into the gate of Strengthen the Slice (A) and Strengthen the Slice (B) for both side. Connect gym set leg (2) and Strengthen the Slice (B) (5) with (J2), M8 Iron Washer(X2), M8 Safety Nut(U2) for both side.
- E. Connect side girt (3) to gym set leg (2) using (K5), M6 Iron Washer(X1), M6 Safety Nut(U1) for both side.

# ASSEMBLE INSTRUCTION OF THE SWING

## 2. SWING ACCESSORY


PART NO	NAME	Q'TY
1	Swing Seat Set	1
G4	M8 U-Bolt	2

PART NO	NAME	Q'TY
U2	M8 Safety Nut	4
X2	M8 Iron Washer	4


**1**




**U2**




**X2**



**G4**



### EXCURSUS:

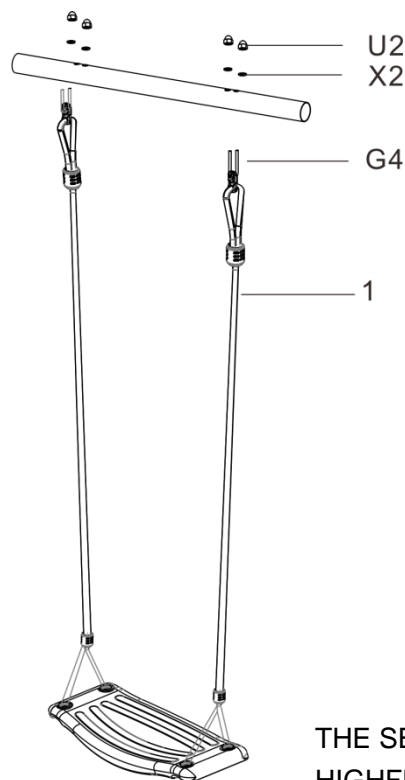

THE SEAT IS 400-600 MM  
HIGH FROM THE GROUND




Hang Swing Seat set (1) onto U-Bolt (G4), then assemble the U-Bolton to the top support bar, fasten them with safety nut (U2) and washer (X2). Ensure the swing's balance and the height of the seat between 400 to 600 mm from the ground.

# ASSMBLE INSTRUCTION OF THE RIGID-SWING

## 4. GONDOLA ACCESSORY ( A Screws bag)

PART NO	NAME	Q'TY
1	Hanger	4
2	Seat Tube	4
3	Fixed Tube	2
5	Seat Board	6
K2	Bolt M6X35mm	8
K5	Bolt M6X50mm	16

PART NO	NAME	Q'TY
K4	Bolt M6X50mm	8
K1	Bolt M6X20mm	4
K3	Bolt M6X45mm	4
U1	M6 Safety Nut	40
X1	M6 Iron Washer	80

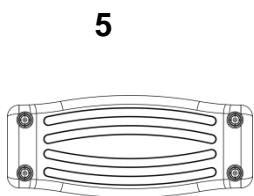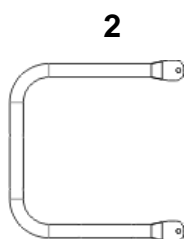

**K2**

**K3**

**K4**

**K1**




**K5**

**U1**

**X1**



# ASSEMBLE INSTRUCTION OF THE GONDOLA

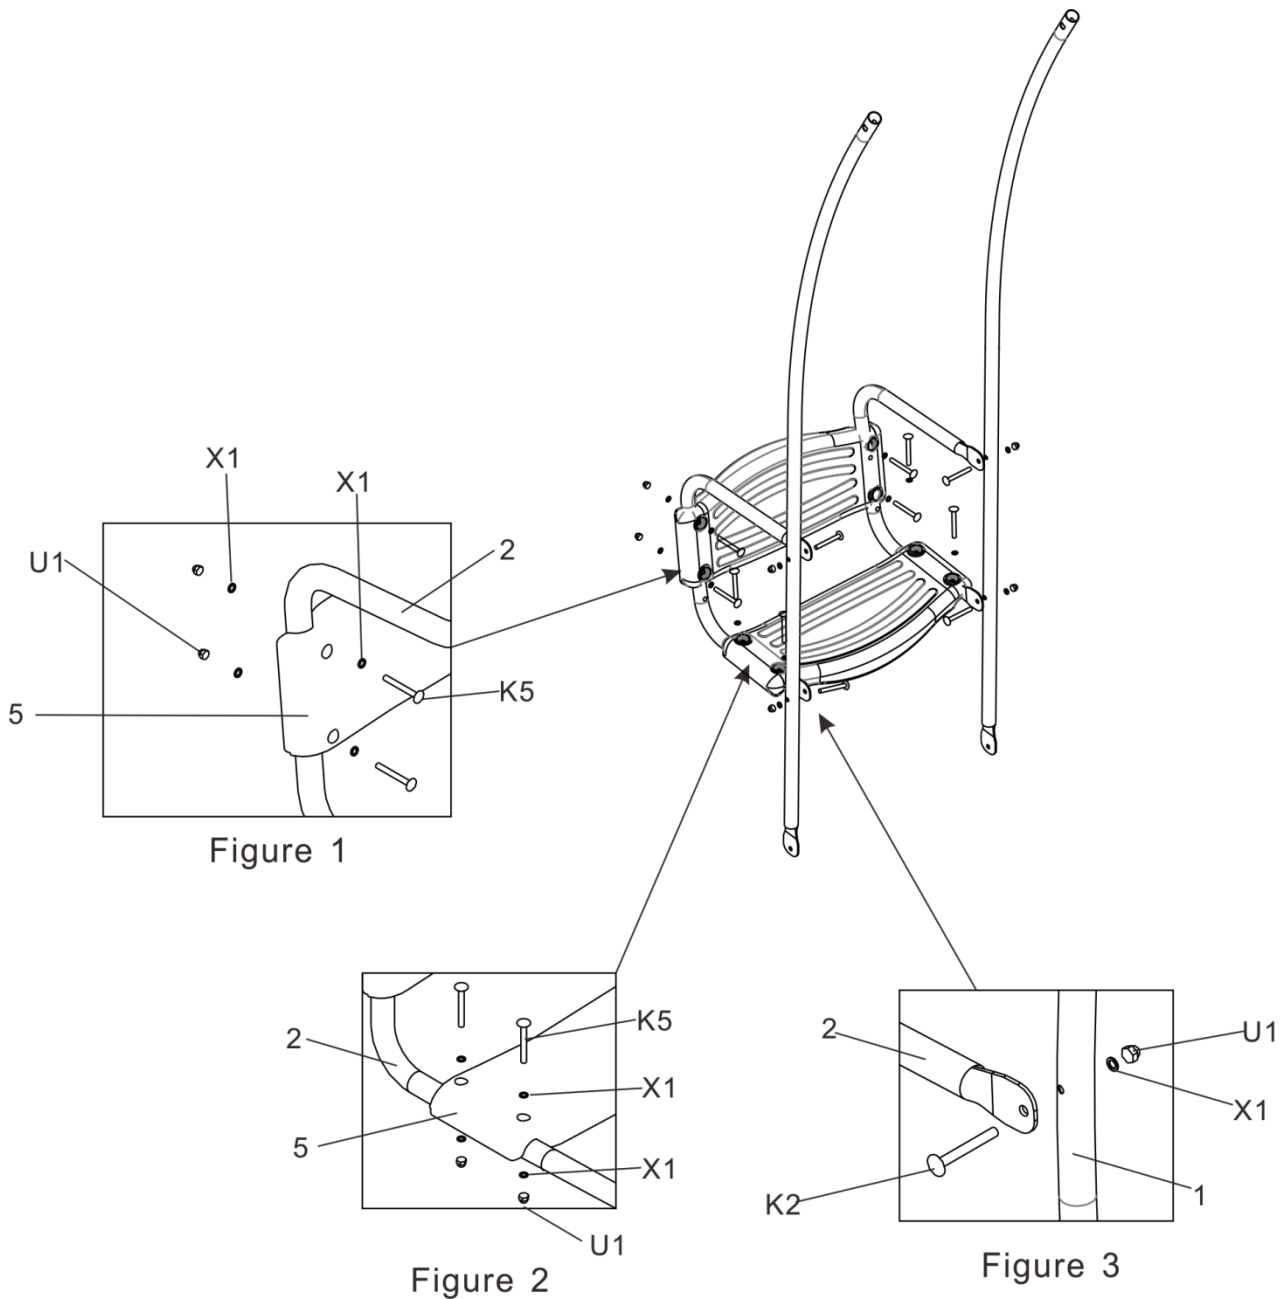

1. Figure 1: Assemble one seat board (5) onto seat tube (2) using bolt(K5), washer (X1) and safety nut (U1).
2. Figure 2: Assemble one seat board (5) onto seat tube (2) using bolt(K5), washer (X1,) and safety nut (U1).
3. Figure 3: Connect hanger (1) and seat tube (2), using bolt (K2), washer (X1) and safety nut (U1).
4. Assemble the other side of the Gondola chair by the same way.



# ASSEMBLE INSTRUCTION OF THE GONDOLA





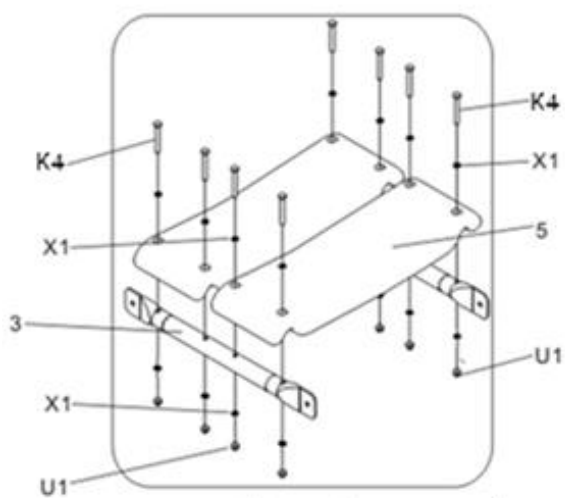


Figure 4



Figure 5

5. Figure 4: Assemble two seat boards (5) on fixed tube (3) using bolt (K4), washer (X1) and safety nut (U1).
6. Figure 5: Connect the assembled fixed tube and the assembled seat tube, using bolt (K1), washer (X1) and safety nut (U1), then you have completed the rocking chair.

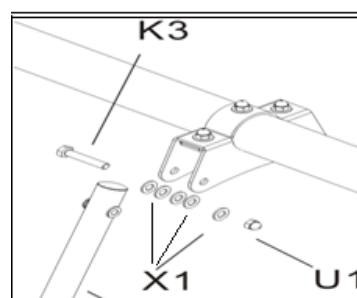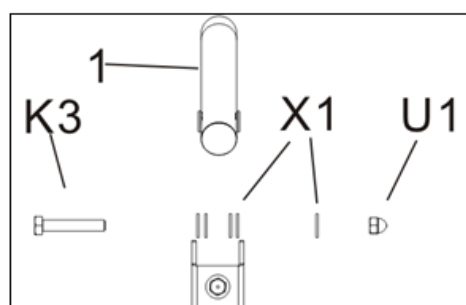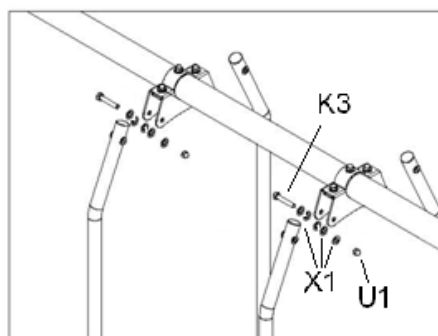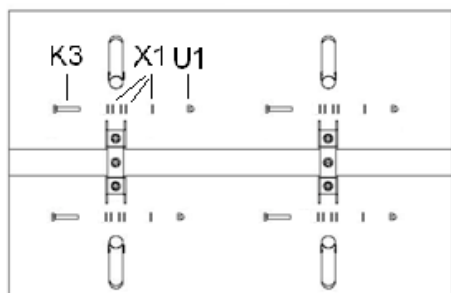

7. Hang the assembled rocking chair onto the hanger clip of the top support bar; fasten them tight with bolt (K3), washer (X1) and safety nut (U1).

## **CARE AND MAINTENANCE**

This swing set was designed and manufactured with quality materials and craftsmanship. With proper care and maintenance, it will provide all players with years of exercise, fun, and enjoyment. Please follow the guidelines below:

This swing set is designed to withstand a specific weight and usage. Child over 110 pounds (50kgs) should not use the swing set. Players should remove all sharp objects from their person prior to using the swing set. All sharp or pointed objects should be kept off the playground at all times.

Always inspect the swing set before each use for worn, damaged or missing parts.

Please be aware of:

- Loosed or missing bolt
- Sagging support top bar
- Bent or broken frame parts, such as the support leg
- Broken, missing, or damaged seats
- Damaged, missing, or insecurely attached rope
- Protrusions of any types (especially sharp types) on the frame or any other places

**IF YOU FIND ANY OF THE PREVIOUS CONDITIONS, OR ANYTHING ELSE THAT YOU FEEL COULD CAUSE HARM TO ANY USER, THE SWING SET SHOULD BE DISASSEMBLED OR SECURED FROM USE UNTIL THE CONDITION(S) HAS BEEN RECTIFIED.**

